

## **1000/5000 km (600/3000 mi) Initial Break-in Maintenance Check List**

check all items on "chassis check list" **plus**

oil change with filter/strainer

valve adjustment: always check specifications for vehicle  
**solid lifter**, all adjustments made on cold engine (4 hrs)

1600 cc engine - .005" exhaust valves, .004" intake  
valves

2000 or 2100 cc engine, .002" exhaust, .001" intake

**hydraulic lifter**, no adjustment needed. Basic setting

for adjusting screw one turn in from contact. Check  
rocker assembly and basic setting at 5000 km/3000mi

see valve adjustment instructions

adjust rear brakes (drum brake model)

check handbrake cables, adjustment 3 - 4 clicks

check heater cable operation

check clutch cable, 1.0" free play at pedal max.

replace transaxle oil

VISUAL INSPECTION UNDER REAR

check front wheel bearings

check steering gear adjustment

check electrolyte in battery

check brake fluid level

VISUAL INSPECTION UNDER FRONT

Check all intake manifold fasteners

check carb balance

check throttle operation with cable

check ignition timing max. 32 deg. BTDC (2800 RPM)

VISUAL INSPECTION ENGINE

check all lights, accessories

check tire pressure

test drive

### **SERVICE every 5000 km (3000 mi) or 6 months**

- 0 oil change, clean strainer, replace filter  
adjust rear brakes (drum brake only)
- 0 check front wheel bearings
- 0 check tire pressure
- 0 test drive

### **SERVICE every 10,000 km (6000 mi) or 12 months**

- 0 check all items on "chassis check list"
- 0 oil change/ clean strainer/ replace filter
- 0 replace fuel filter
- 0 valve adjustment: always check specifications for vehicle  
**solid lifter**, all adjustments made on cold engine (4 hrs)  
1600 cc engine - .005" exhaust valves, .004" intake  
valves  
2000 or 2100 cc engine, .002" exhaust, .001" intake  
**hydraulic lifter**, no adjustment needed. Basic setting  
for adjusting screw one turn in from contact
- 0 adjust rear brakes (drum brakes only), check linings
- 0 check handbrake cable
- 0 check clutch cable max 1.0" free play
- 0 check heater cable
- 0 check engine and transmission for oil leaks
- 0 check transaxle oil
- 0 visually inspect rear
  
- 0 check front bearings/ ball joints/ dust boots
- 0 check steering column/linkage bolts
- 0 check steering gear adjustment
- 0 grease front axle

- 0 check brake fluid
- 0 check brake lining
- 0 visually inspect front
  
- 0 change spark plugs
- 0 change contact breaker points (if applicable)
- 0 change dist. cap
- 0 change dist. rotor
- 0 check intake manifolds for tightness, upper and lower
- 0 check carb balance and carburetor linkage
- 0 check throttle operation with cable
- 0 check ignition timing max 32 deg. BTDC (2800 RPM)
- 0 visually inspect engine
  
- 0 check lights and accessories
- 0 check battery water level
- 0 check tire pressure, 24 psi front, 31 psi rear cold
- 0 test drive
- 0 clean up car

**SERVICE every 25000 km (15,000 mi) or 36 months**

- 0 replace transaxle oil
- 0 replace brake fluid

